


# Quick Guide

Gmate<sup>®</sup> WHEEL











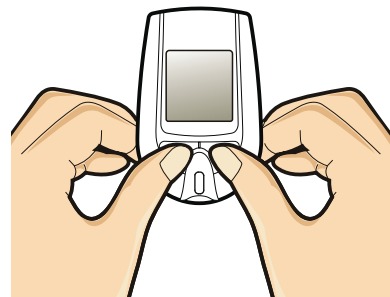


### Press Shortly

To turn off the meter and move to the next in setting mode

### Press for 3 seconds

To enter the setting mode and exit the setting mode

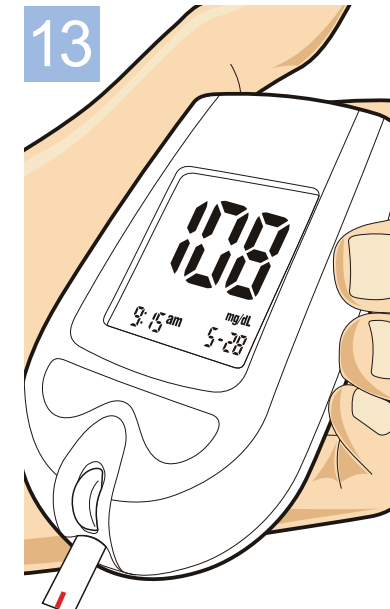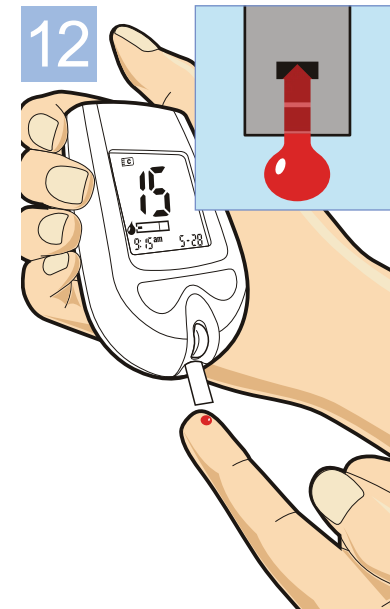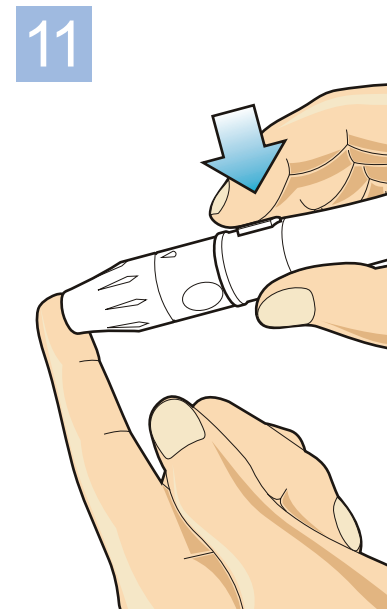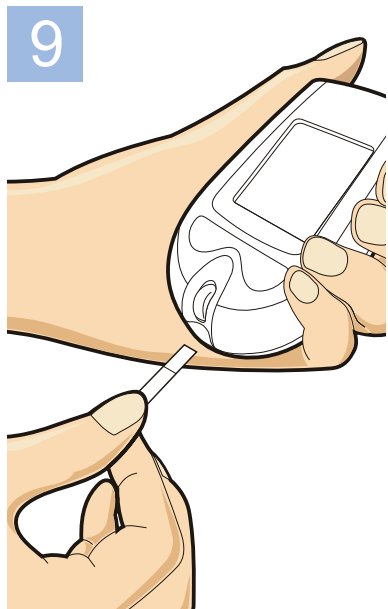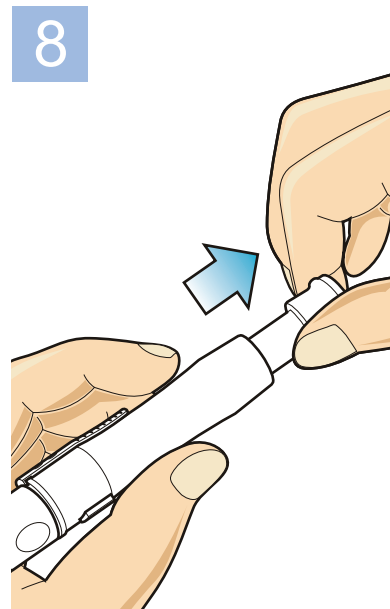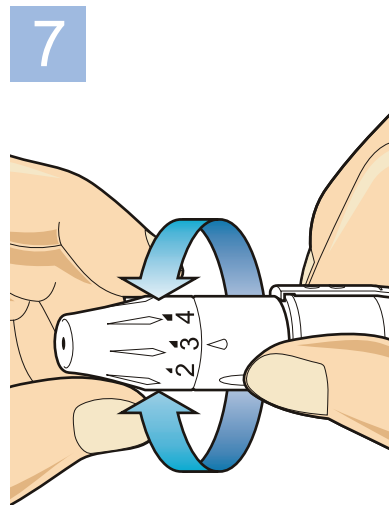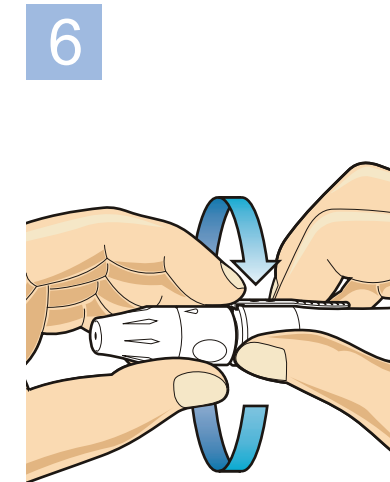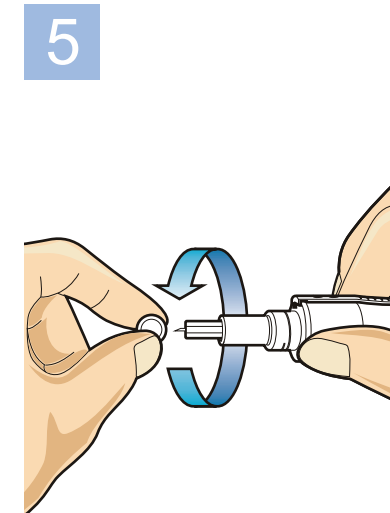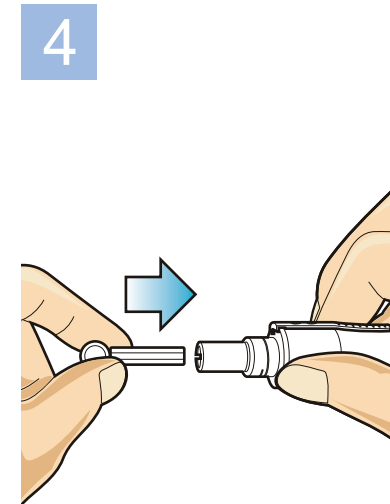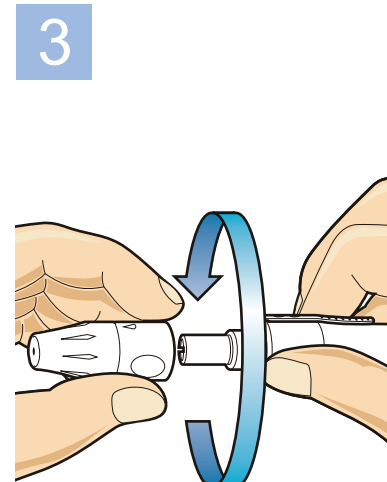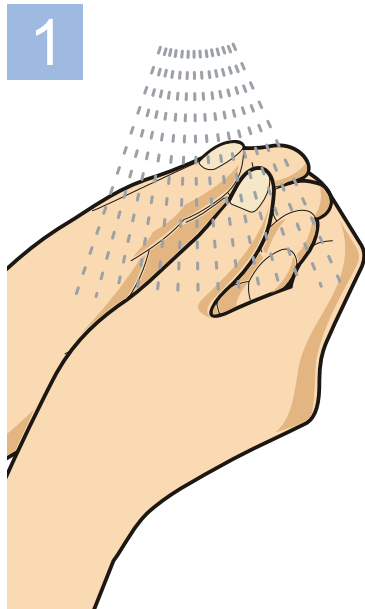

When inserting a used test strip.



The test strip was inserted incorrectly or have a problem.



When the meter has problem.



When environmental temperature is BELOW or ABOVE system operation range (10-32°C, 50-89.6°F).